


YCOOLE


User Manual

Multifunctional
high speed
Handheld Fan
M03 Plus

M03

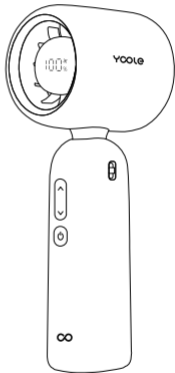

Functional Interpretation

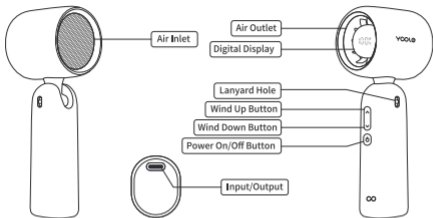

Precautions Before Use

1. Please inspect the product and power cord for any damage. Ensure they are intact and assemble the product correctly according to the instructions before use.
2. Before charging the product, confirm that the power supply voltage matches the requirements specified on the product label.
3. Do not disassemble, modify, or repair the product on your own to avoid risks such as electric shock or fire. For repairs, please contact the retailer where the product was purchased or an authorized service center designated by the manufacturer.

Usage Instructions

1. Power Button
 - Press and hold for 2 seconds to turn the fan on or off;

2. Wind Up Button (Not for Power On/Off)

- Short press the button to adjust speeds incrementally (1-20-40-60-80-100).
- Long press for stepless speed adjustment from 1 to 100.

3. Wind Down Button (Not for Power On/Off)

- Short press the button to adjust speeds decrementally (100-80-60-40-20-1).
- Long press for stepless speed adjustment from 100 to 1.

4. Display Screen Indicators

- When powered on, the fan defaults to speed level 1, displaying the speed level number and a fan icon in the upper right corner.
- After adjusting the speed level, the display will show the remaining battery level for 3 seconds.
- When discharging to external devices, the screen displays the current remaining battery level
- When the battery level drops below 10%, the screen will start flashing. If it falls below 6%, the screen will display "L0" and continue flashing.

5. Product Cleaning

- Ensure the power is turned off before cleaning.
- The product components are non-detachable (forced removal may cause damage). Use a clean cloth to wipe the display screen cover and rear filter area.
- Do not use water or other liquids to clean electrical components (such as the motor, charging port, etc.).
- Do not touch the power supply or electrical parts with wet hands or cloths to prevent potential hazards.

Safety Precautions

To ensure safe use and avoid harm to yourself, others, or property damage, please strictly follow the safety guidelines below. Failure to comply with these safety warnings may result in accidents.

1.This product is not a toy and should not be used by infants or young children as a plaything. Children under the age of 14 should use the product only under adult supervision.

2.This product is not suitable for individuals with physical, sensory, cognitive impairments, or insufficient experience or knowledge to operate it independently (including children), unless supervised by a person responsible for their safety.

3. Avoid prolonged direct exposure to airflow on the body, especially for the elderly and children, to prevent discomfort.
4. Do not insert fingers, sharp objects, or metal items into the device, as this may cause malfunction or pose an electric shock hazard.
5. Do not plug in or unplug the power supply with wet hands or a damp cloth to prevent electric shock.
6. This product is not waterproof. Do not rinse it with water or use it in bathrooms, humid environments, or areas with standing water. If the surface is wet, dry it thoroughly before use. If water enters the product, do not use it again.
7. Do not block the air outlets or inlets, as this may affect heat dissipation and cause the product to malfunction.
8. Do not use or store the product in high-temperature environments (above 60°C) or in enclosed spaces such as greenhouses, construction sites, near stoves, or inside sun-exposed vehicles. Doing so may cause plastic deformation, battery explosion, or other malfunctions and accidents.
9. Do not squeeze, disassemble, or expose the battery to prolonged high temperatures (above 60°C), as this may result in leakage or explosion.
10. When charging with a power adapter, ensure the input voltage and current are within the range of 5V-2A and that the adapter complies with national safety certification standards.
11. This product uses a lithium-ion battery with no memory effect. Overcharging or over-discharging may reduce its lifespan. If not in use for an extended period (over 3 months), fully charge the battery before storage.
12. If the product emits smoke, catches fire, or exhibits other abnormal conditions during use, immediately turn off the power and stop using it. Contact the dealer or manufacturer for assistance. Do not attempt to disassemble or repair it yourself.
13. Do not pull or bend the power cord during charging to prevent poor contact.
14. Before disposing of the product, remove the battery and ensure the power is turned off. Dispose of the battery in accordance with local regulations. When removing the battery, carefully pry open the handle using appropriate tools (the battery is located inside the handle; avoid damaging it), detach the circuit board, and remove the battery.

Names and Contents of Hazardous Substances in the Product

Component Name	Hazardous Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Plastic Parts	O	O	O	O	O	O
Metal Parts	O	O	O	O	O	O
Silicone Parts	O	O	O	O	O	O
PCB Main Board	X	O	O	O	O	O

This table is prepared in accordance with the provisions of SJ/T11364.

O: Indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit requirements specified in GB/T 26572.

X: Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirements specified in GB/T 26572.

All components marked with "X" in this table comply with the exemption list for restricted substances in the China RoHS Compliance Management Catalogue.

All components marked with "X" in this table comply with the EU RoHS legislation.
Note: The reference marking for the environmental protection use period depends on the conditions of normal operation, including temperature and humidity.

Warranty Certificate (Repair, Replacement and Refund)

1. Please keep the warranty card properly as proof for repair services.
2. The product comes with a one-year warranty period starting from the date of purchase.
3. During the warranty period, if the product malfunctions arise under normal use and is verified by our company, we will provide free repair or replacement services.

Free repair services will not be provided in the following situations

Our company provides limited warranty services within the warranty period. However, for equipment malfunctions or damages caused by the following circumstances, which are beyond the scope of the warranty, our company will not be obligated to provide free repair services:

1. The device or component is beyond the valid warranty period.
2. Malfunctions or damage caused by failure to follow the proper installation, storage, or usage instructions outlined in the user manual.
3. Malfunctions or damage resulting from disassembly or repairs performed by unauthorized institutions or personnel.
4. Malfunctions or damage caused by external factors or human actions, including but not limited to operational errors, scratches, improper handling, collisions, or the use of incorrect voltage or current.
5. Malfunctions or damage caused by force majeure events such as natural disasters (e.g., earthquakes, fires, etc.).

Product Specifications


Brand	YOOLE
Product Name	Multifunctional high speed Handheld Fan
Product Model	M03Plus
Input	5V = 2A
Output	5V = 2A
Battery Capacity	4500mAh
Battery Cell	Lithium-ion Battery
Charging Time	3hours
Product Weight	175g
Product Dimensions	156*57*53 (mm)
Manufacturer	DOHOZZ HOLDINGS LIMITED
Address	UNIT B ON 9/F, THOMSON COMMERCIAL BUILDING 8 THOMSON ROAD, HK

Package Contents

Fan ×1
Base ×1
USB-C Charging Cable ×1
Lanyard ×1
User Manual ×1

The contents of this manual and the product specifications are subject to change without prior notice.

ฟังก์ชันการทำงาน

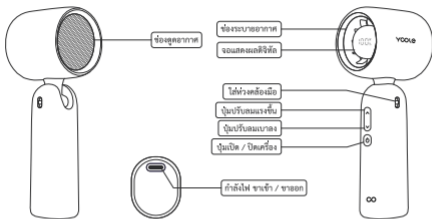

ข้อควรระวังก่อนใช้งาน

1. กรุณาตรวจสอบสลิค้ำและสายไฟว่ามีความเสียหายหรือไม่ ให้แน่ใจว่าอยู่ในสภาพสมบูรณ์ และประกอบผลิตภัณฑ์ให้ถูกต้องตามคำแนะนำก่อนใช้งาน
2. ก่อนชาร์จผลิตภัณฑ์ ให้ยืนยันว่าแรงดันไฟฟ้าของแหล่งจ่ายไฟตรงตามที่ระบุบนฉลากของผลิตภัณฑ์
3. ห้ามแยกชิ้นส่วน ตัดแปลง หรือซ่อมแซมผลิตภัณฑ์ด้วยตนเอง เพื่อป้องกันความเสี่ยงเช่น ไฟฟ้าช็อตหรือไฟไหม้ สำหรับการซ่อมแซม กรุณาติดต่อผู้จัดจำหน่ายที่ซื้อสินค้า หรือศูนย์บริการที่ได้รับอนุญาตจากผู้ผลิต

คำแนะนำการใช้งาน

1. ปุ่มเปิด/ปิดเครื่อง
- กดค้าง 2 วินาทีเพื่อเปิดหรือปิดพัลลัม

2. ปุ่มหมุนขึ้น (ไม่ใช่ปุ่มเปิด/ปิดเครื่อง)

- กดสั้น ๆ เพื่อปรับความเร็วแบบขั้นบันได (1-20-40-60-80-100)
- กดค้างเพื่อปรับความเร็วแบบไม่ขั้นบันได จาก 1 ถึง 100

3. ปุ่มหมุนลง (ไม่ใช่ปุ่มเปิด/ปิดเครื่อง)

- กดสั้น ๆ เพื่อปรับความเร็วแบบลดลง (100-80-60-40-20-1)
- กดค้างเพื่อปรับความเร็วแบบไม่ขั้นบันได จาก 100 ถึง 1

4. ตัวบ่งชี้บนหน้าจอแสดงผล

- เมื่อเปิดเครื่อง พัดลมจะตั้งค่าเริ่มต้นที่ความเร็วระดับ 1 และจะแสดงหมายเลขระดับความเร็วพร้อมไอคอนพัดลมที่หมุนช้าวน
- หลังจากปรับระดับความเร็ว หน้าจอจะแสดงระดับแบตเตอรี่ที่เหลือ เป็นเวลา 3 วินาที
- ขณะส่งพลังงานให้อุปกรณ์อื่น หน้าจอจะแสดงเปอร์เซ็นต์แบตเตอรี่ที่เหลืออยู่
- เมื่อระดับแบตเตอรี่ต่ำกว่า 10% หน้าจอจะเริ่มกระพริบ หากต่ำกว่า 6% หน้าจอจะแสดง "LO" พร้อมกระพริบต่อเนื่อง

5. การทำความสะอาดและบำรุงรักษาผลิตภัณฑ์

- ส่วนประกอบของผลิตภัณฑ์ไม่สามารถถอดแยกได้
- (การถอดโดยใช้แรงอาจทำให้เกิดความเสียหาย) ใช้ผ้าสะอาดเช็ดหน้าจอและบริเวณแผ่นกรองด้านหลัง
- ห้ามใช้น้ำหรือของเหลวอื่น ๆ ทำความสะอาดส่วนประกอบทางไฟฟ้า เช่น มอเตอร์ ช่องชาร์จ ฯลฯ
- ห้ามสัมผัสแหล่งจ่ายไฟหรือชิ้นส่วนไฟฟ้าด้วยมือหรือผ้าที่เปียก เพื่อป้องกันอันตรายที่อาจเกิดขึ้น

ข้อควรระวังด้านความปลอดภัย

เพื่อให้การใช้งานปลอดภัย และป้องกันอันตรายต่อตัวคุณ ผู้อื่น หรือความเสียหายต่อทรัพย์สิน กรุณาปฏิบัติตามคำแนะนำด้านความปลอดภัยอย่างเคร่งครัด การไม่ปฏิบัติตามคำเตือนเหล่านี้ อาจทำให้เกิดอุบัติเหตุ

1. ผลิตภัณฑ์นี้ไม่ใช่ของเล่น ห้ามให้ทารกหรือเด็กเล็กใช้เป็นของเล่น เด็กอายุต่ำกว่า 14 ปีควรใช้งานภายใต้การดูแลของผู้ใหญ่เท่านั้น

2. ผลิตภัณฑ์นี้ไม่เหมาะสำหรับบุคคลที่มีความบกพร่องทางร่างกายการรับรู้ หรือสติปัญญา หรือผู้ที่มีความพิการ หรือความรู้ในการใช้งานด้วยตนเอง (รวมถึงเด็ก) เว้นแต่จะมีผู้รับผิดชอบดูแล

3. หลีกเลี่ยงการถูกลมพัดโดยตรงเป็นเวลานาน โดยเฉพาะสำหรับผู้สูงอายุและเด็ก เพื่อป้องกันความไม่สบายตัว
4. ห้ามสอดนิ้วมือ วัตถุมีคม หรือโลหะเข้าไปในอุปกรณ์ เพราะอาจทำให้เครื่องทำงานผิดปกติหรือเกิดไฟฟ้าช็อต
5. ห้ามเสียบหรือถอดปลั๊กด้วยมือเปียกหรือผ้าชุบน้ำ เพื่อป้องกันไฟฟ้าช็อต
6. ผลิตภัณฑ์นี้ไม่กันน้ำ ห้ามล้างด้วยน้ำ หรือใช้งานในห้องน้ำ สภาพแวดล้อมที่มีความชื้นสูง หรือบริเวณที่โดนน้ำ หากน้ำเข้าผลิตภัณฑ์ ห้ามใช้งานอีก
7. ห้ามปิดกั้นช่องลมเข้า-ออก เพราะอาจทำให้การระบายความร้อนลดลงและทำให้เครื่องทำงานผิดปกติ
8. ห้ามใช้งานหรือเก็บผลิตภัณฑ์ในสภาพแวดล้อม ที่มีอุณหภูมิสูง (เกิน 60°C) หรือในพื้นที่ปิด เช่น โรงเรือน หน่วยงานก่อสร้าง โกดังเตา หรือในรถที่โดนแดด อาจทำให้พลาสติกเสียรูป แบตเตอรี่ระเบิด หรือเกิดความผิดปกติและอุบัติเหตุอื่น ๆ
9. ห้ามบีบ ถอดประกอบ หรือให้แบตเตอรี่ถูกความร้อนสูง เป็นเวลานาน (เกิน 60°C) เพราะอาจทำให้แบตเตอรี่รั่ว หรือระเบิด
10. เมื่อชาร์จด้วยอะแดปเตอร์ไฟฟ้า ให้แน่ใจว่าแรงดันและกระแสไฟเข้าตรงตาม 5V-2A และ อะแดปเตอร์เป็นไปตามมาตรฐานความปลอดภัยของประเทศ
11. ผลิตภัณฑ์นี้ใช้แบตเตอรี่ลิเธียมไอออน ที่ไม่มีผลหน่วยความจำการชาร์จเกิน หรือปล่อยแบตเตอรี่หมดเกินไปอาจทำให้ อายุการใช้งานลดลง หากไม่ได้ใช้งานเป็นเวลานาน (เกิน 3 เดือน) ควรชาร์จแบตเตอรี่เต็มก่อนเก็บรักษา
12. หากผลิตภัณฑ์เกิดควัน ไฟลุก หรือมีความผิดปกติอื่น ๆ ขณะใช้งาน ให้ปิดเครื่องทันทีและหยุดใช้งาน ติดต่อผู้จัดจำหน่ายหรือผู้ผลิตเพื่อขอความช่วยเหลือ ห้ามถอดประกอบหรือซ่อมแซมด้วยตนเอง
13. ห้ามดึงหรือตัดสายไฟขณะชาร์จ เพื่อป้องกันการสัมผัสไม่แน่น
14. ก่อนทิ้งผลิตภัณฑ์ ให้ถอดแบตเตอรี่ออกและตรวจสอบว่าได้ปิดเครื่องแล้ว ทั้งแบตเตอรี่ตามข้อกำหนดของท้องถิ่น วิธีถอดแบตเตอรี่ ใช้เครื่องมือที่เหมาะสมค่อย ๆ แฉงฝาครอบด้านบนอย่างระมัดระวัง (แบตเตอรี่อยู่ภายในด้ามจับ ห้ามทำให้เสียหาย) ถอดแผงวงจรออก นำแบตเตอรี่ออก

ชื่อและปริมาณของสารอันตรายในผลิตภัณฑ์

ชื่อชิ้นส่วน	สารอันตราย					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
ชิ้นส่วนพลาสติก	O	O	O	O	O	O
ชิ้นส่วนโลหะ	O	O	O	O	O	O
ชิ้นส่วนซิลิโคน	O	O	O	O	O	O
ชิ้นส่วนซิลิโคน	X	O	O	O	O	O

ตารางนี้จัดทำขึ้นตามข้อกำหนดของมาตรฐาน SJ/T11364

O: หมายความว่า ปริมาณของสารอันตรายในวัสดุที่เป็นเนื้อเดียวกันทั้งหมดของชิ้นส่วนนั้น ต่ำกว่าค่าจำกัดที่กำหนดไว้ในมาตรฐาน GB/T 26572

X: หมายความว่า ปริมาณของสารอันตรายในวัสดุที่เป็นเนื้อเดียวกันอย่างน้อยหนึ่งชนิดของชิ้นส่วนนั้น เกินกว่าค่าจำกัดที่กำหนดไว้ในมาตรฐาน GB/T 26572

- ส่วนประกอบทั้งหมดที่มีเครื่องหมาย "X" ในตารางนี้ เป็นไปตามรายการยกเว้นของสารต้องห้ามใน แคตตาล็อกการจัดการการปฏิบัติตาม China RoHS

- ส่วนประกอบทั้งหมดที่มีเครื่องหมาย "O" ในตารางนี้ สอดคล้องกับข้อกำหนดของ กฎหมาย EU RoH

หมายเหตุ : สัญลักษณ์ระบุระยะเวลาใช้งานที่เป็นมิตรต่อสิ่งแวดล้อมขึ้นอยู่กับสภาวะการใช้งานปกติ รวมถึงอุณหภูมิและความชื้น

บัตรรับประกัน (การซ่อม เปลี่ยน และคืนสินค้า)

1. กรุณาเก็บบัตรรับประกันไว้อย่างดี เพื่อใช้เป็นหลักฐานในการขอรับบริการซ่อม
2. ผลิตภัณฑ์นี้มีระยะเวลารับประกัน 1 ปี นับจากวันที่ซื้อ
3. ภายในระยะเวลาการรับประกัน หากผลิตภัณฑ์เกิดการชำรุดเสียหายภายใต้การใช้งานปกติ และ ได้รับการยืนยันจากทางบริษัท ทางเราจะให้บริการซ่อมหรือเปลี่ยนสินค้าโดยไม่คิดค่าใช้จ่าย

กรณีที่ไม่อยู่ในเงื่อนไขการรับประกันฟรี

บริษัทฯ ให้บริการรับประกันแบบจำกัด ภายในระยะเวลาที่กำหนด แต่หากอุปกรณ์หรือชิ้นส่วนเกิดการชำรุดเสียหายด้วยสาเหตุดังต่อไปนี้ ซึ่งอยู่นอกเหนือขอบเขตการรับประกัน บริษัทฯ จะไม่รับผิดชอบในการซ่อมแซมฟรี :

1. อุปกรณ์หรือชิ้นส่วนเกินระยะเวลาการรับประกันที่กำหนด
2. การชำรุดหรือเสียหายที่เกิดจาก การไม่ปฏิบัติตามคำแนะนำ การติดตั้ง การจัดเก็บ หรือการใช้งานตามคู่มือผู้ใช้
3. การชำรุดหรือเสียหายที่เกิดจากการรื้อ หรือการซ่อมแซมโดยศูนย์บริการหรือบุคคลที่ไม่ได้รับอนุญาต
4. การชำรุดหรือเสียหายที่เกิดจากปัจจัยภายนอก หรือการกระทำของมนุษย์ เช่น ความผิดพลาดในการใช้งาน รอยขีดข่วน การใช้งานที่ไม่ถูกต้อง การกระแทก หรือการใช้แรงดันไฟฟ้าหรือกระแสไฟฟ้าที่ไม่ถูกต้อง
5. การชำรุดหรือเสียหายที่เกิดจากเหตุสุดวิสัย เช่น ภัยธรรมชาติ (เช่น แผ่นดินไหว ไฟไหม้ เป็นต้น)

ข้อมูลสินค้า

แบรนด์	YOOLE
ชื่อสินค้า	พัดลมมือถือมีพัดติฟังก์ชัน ความเร็วสูง รุ่น M03 Plus
รุ่นสินค้า	M03 Plus
กำลังไฟเข้า	5V = 2A
กำลังไฟออก	5V = 2A
ความจุแบตเตอรี่	4500mAh
ชนิดแบตเตอรี่	ลิเธียมไอออน
เวลาในการชาร์จ	3 ชั่วโมง
น้ำหนักสินค้า	175 กรัม
ขนาดสินค้า	156*57*53 (มม)
ผู้ผลิต	DOHOZZ HOLDINGS LIMITED
ที่อยู่	UNIT B ON 9/F, THOMSON COMMERCIAL BUILDING 8 THOMSON ROAD, HK

อุปกรณ์ภายในกล่อง

- พัดลม × 1
- แท่นวาง × 1
- สายชาร์จ USB-C × 1
- สายคล้องมือ × 1
- คู่มือการใช้งาน × 1

หมายเหตุ: เนื้อหาของคู่มือนี้และข้อมูลจำเพาะของผลิตภัณฑ์อาจมีการเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า